DENTAL EQUIPMENT MAINTENANCE & SERVICE PARTS



Visit our website **ASISupport.com** anytime. Questions can also be submitted via email to **Service@ASISupport.com**.





HOW TO USE THIS CATALOG

KNOW YOUR SYSTEM

Take a moment to get to know your ASI system. This will help determine the appropriate parts based on purchase date, serial number, etc. It will also help your ASI Customer Support Team, should you need to contact them with any questions.

MAINTENANCE & TROUBLESHOOTING GUIDELINES

Prevent issues before they happen. Visit us online at **ASISupport.com** for maintenance tips and troubleshooting.

TIPS AND TIME SAVERS

You know what part you need, but there are multiple versions – Which one will work for you? Knowing your system's build date will help you find exactly what you're looking for and save you time.

NEED A TECHNICIAN?


Visit ASISupport.com/technician-locator.


TABLE OF CONTENTS

PREVENTATIVE SUCTION INSTRUMENTS **SECTION 1 SECTION 5** MAINTENANCE KITS & SUPPLIES PORTABLE COMPRESSOR GENERAL PARTS, **SECTION 6 SECTION 2 TUBING & TOOLS & SUCTION PARTS INSTRUMENTS -**ULTRASONICS, ELECTRIC **SECTION 7 DELIVERY SYSTEM PARTS** MOTORS, OBTURATION, IRRIGATION, FIBER OPTICS **SECTION 4 SECTION 8** WATER SYSTEM PARTS INDEX

WHAT'S MY SERIAL NUMBER? WHEN WAS MY SYSTEM BUILT?

CHECK THE BACK OF YOUR UNIT FOR A SILVER STICKER. IT CONTAINS THE SERIAL NUMBER, MONTH AND YEAR YOUR UNIT WAS BUILT.

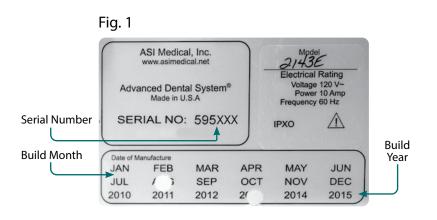

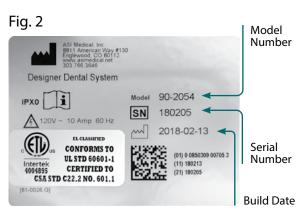

IMPORTANT: 1st generation stickers (Fig. 1) go from serial number 490001 through serial number 596750. 2nd generation stickers (Fig. 2) begin with serial number 160901, and began on September 2016.

ASI's delivery system service and repair kits include common service parts for most of your regular maintenance needs.





5 Year Maintenance Kit, Dental Delivery

PN 95-KIT2A or 95-KIT2B (shown)

Delivery system maintenance kit for 5 year intervals. This maintenance kit includes: Water relay (1)

In-line regulator (1)

manufactured AFTER 10/2006.

Control block puck set (1) OR control block diaphragm (1) Version A is for units manufactured BEFORE 10/2006. Version B is for units



Annual Maintenance Kit, Suction Instruments

PN **95-KIT3**

Annual maintenance kit for suction instruments includes:

O-ring grease (1 pkg of 5)

O-ring for solids trap (1 pkg of 5)

O-ring for HVE (1 pkg of 10)

O-ring for saliva ejector/micro evacuator (1 pkg of 10)

O-ring for irrigator (1 pkg of 10)

SECTION 1: PREVENTATIVE MAINTENANCE KITS



previous model

5 Year Maintenance Kit, **Vacuum Pump**

PN **95-KIT6**

Vacuum pump maintenance kit for Self-Contained units for 5 year intervals. This maintenance kit includes: Felt filter (1 pkg of 2) Vacuum rebuild kit (1) Purge hose assembly – Side Drain (1) For Models before SN 180320.





Vacuum Maintenance Kit

PN **95-KIT8A** or **95-KIT8B**

Felt filter (2), vacuum rebuild kit (1), purge hose buttom drain Vacuum (1) Maintenance Kit (for units SN 180320 to 191007, with bottom drain sediment

Version B (2), felt filter, vacuum rebuild kit (1), shurflo purge hose assembly (1) (for units SN 191008 and after).





SECTION 1: PREVENTATIVE MAINTENANCE KITS

Maintenance Kit, Foot Control

PN 95-KIT4A or 95-KIT4B (shown)

Foot control maintenance should be performed every 5 years. This maintenance kit includes: Foot control toggle assembly (1) Replacement toggles (2)
Control valve rebuild kit (1)Version A is for units manufactured BEFORE 3/31/2013. Version B is for units manufactured AFTER 04/01/2013.







Decals, Replacements Beige or White

PN **95-0280** PN 95-0280W

Sheet of replacement decals for your cart. Updates the appearance of your cart.



Overlay Master, Designer Series, White

PN 95-0261W

Overlay master for the Designer Advanced Endodontic Systems series. White. Dimensions: 5.625"h x 18.25"w.



Air Supply Assembly

PN **95-0321**

Junction-box regulator. Pressure setting should be 80psi or 0.5 - 0.55MPa.



Filter, Air Supply Regulator

PN **95-0337**

Replacement filter for junction box regulator (PN 95-0321).



Silicone, O-Ring Grease,

PN **95-0085**

Silicone formulation for O-rings. Do not use petroleum jelly to lubricate o-rings. Do not use cotton swab to apply silicone dielectric compound. Pkg of 5.



Touch-up Paint, White & **Beige Textured**

PN **95-4052** (white) 1-oz Bottle with Built-in Brush.

PN **95-4038** (beige) 1-oz Bottle with Built-in Brush.



Cord, NEMA Adaptor PN **95-0233**



Retrofit Kit, Arm Pin, Socket

PN **95-0384**

Retrofit Kit includes a "T" bracket with push pin design for a sturdier, resilient way to hold accessory arm attachments.

RECOMMEND TOOLS



Sleeve Tool, Plastic

PN 95-0110

Sleeve tool for 1/16" & 1/8" sleeves, plastic.



Shear, Side Cutter

PN 95-0131

Side cutter (shear).



Screwdriver, Flathead

PN **95-0224**

Flathead Screwdriver for service kit, 2.5mm x 0.4mm.



Drill And Tap Set, 36 Drill, 6-32 Tap

PN **95-0408**

Drill And Tap Set, 36 Drill, 6-32 Tap.



Nutdriver, 1/4"

PN **95-0132**

1/4" Nutdriver for replacing barbs on control block and button valves on irrigation handpieces.



Nutdriver, 11/32"

PN **95-0317**

11/32" Nutdriver; for replacing micro irrigator buttons.



Allen Wrench, Hex Key Set, 9 Sizes

PN **95-0217**

Allen Wrench/Hex Key set, 9 sizes.



LOCTITE® Threadlocker

PN **95-0342**

LOCTITE® 222MS Purple Threadlocker.



Screws, Socket,

PN **95-0294**

32 x 3/16", Used for keeping the holder bar and the pivoting bracket in place, pkg of 10.



Plug, Hex with Washer, 10/32"

PN 95-0218

Hex Plug for control block, 10/32", pkg of 10 with plastic washers.



Fitting, Hex Barb With Washer, 1/16"

PN 95-0219

Hex Barb for control block, 1/16" stainless steel connector, pkg of 10 with plastic washers.



Fitting, Hex Barb With Washer 1/8"

PN 95-0220

Hex Barb for control block, 1/8" stainless steel connector, pkg of 10 with plastic washers.



Fittings Kit

PN 95-0096

Fittings Kit includes 12 (1/2") sleeves, 7 (1/4") sleeves, 1 (1/8" x 1/16" t-connector, 1 (1/8") t connector, 1 (1/16") t-connector, 4 (1/16") tubing couplers, 2 (1/8") tubings coupler, 1 pkg silicone o-ring grease.



Washer, Plastic #10

PN 95-0179

Pkg of 10 plastic washers.



Sleeves, Tubing, 1/4" & 1/8"

PN 95-0180

10 x 1/4" and 10 x 1/8", pkg of 20 sleeves.



Sleeves, Tubing, 1/8"

PN 95-0128

Sleeves for 1/8" Outer Diameter Tubing, pkg of 10.



Connector, "T" for Irrigator, 1/16"

PN **95-0185**

"T" Connector for Irrigator line, 1/16" x 1/16" x 1/16" connections, pkg of 10.



Connector, Barb for Irrigator, 3/32" - 1/16"

PN **95-0186**

Connector Barb for Irrigator line, 3/32" x 1/16" connections, pkg of 10.



Connector, "T" for Irrigator, 1/8" x 1/16"

PN **95-0181**

"T" Connector for Irrigator line, 1/8" x 1/16", pkg of 10.



Coupler, Connector for Irrigator, 1/8"x 1/16"

PN **95-0182**

Straight Through Coupler barb for Irrigator line, 1/8" x 1/16", pkg of 10.



Coupler Connector for Irrigator, 1/8"

PN 95-0183

Straight through Coupler barb for Irrigator line. 1/8" x 1/8" connections, pkg of 10.



Connector, "T" for Irrigator, 1/8"

PN 95-0184

"T" Connector for Irrigator line, 1/8" x 1/8" x 1/8" connections, pkg of 10.



Coupler, Tubing, 1/16"

PN 95-0129

1/16" Inner Diameter Tubing Coupler, straight through, fits 1/8" tubing, pkg of 10.



Plugs, Tubing, 1/16" & 1/8"

PN **95-0425** (shown)

1/16" Inner Diameter Tubing Plug, pkg of 10.

PN **95-0424**

1/8" Inner Diameter Tubing Plug, pkg of 10.

CART SYSTEM CASTERS

Smaller casters (with 2 1/2" diameter) were used starting in the later 1990s. December 1, 2006, the Triton series units began using larger 3" casters. Classic Series systems began using 3" casters in June of 2007.

Caster Adapter Plate

PN **95-0193** Use the Caster Adapter plate when upgrading 2.5" casters to 3", 4", or 5" casters.




2.5" Caster* PN **95-0336** *Used on systems built before 1/1/06.



3" Caster (Small) PN **95-0273/S**



3" Caster PN **95-0273**

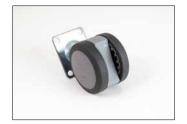

3" Locking Caster PN **95-0273L**



2" Caster PN **95-0396**



Caster, Momentum Stool PN **95-0399**

4" Caster PN **95-0274**



4" Locking Caster PN **95-0274L**



5" Caster PN **95-0275**



5" Locking Caster PN **95-0275L**



TECH TIP:

TUBING LENGTH? BULKHEAD SIZE?

All tubing comes in either 50" or 60" lengths. Be sure to measure yours before ordering.

For Small (3/4") Bulkhead handpiece tubing, you will need to upgrade your system with 7/8" bulkhead connector PN 95-0189 and handpiece tubing.

Note the in-service dates before placing your order. Was your system built before or after 6/1/2006?



Tubing, HVE, 7/16" PN **95-0287** Beige PN **95-0287G** Gray PN **95-0287W** White High Volume Evacuator (HVE) tubing, 7/16" inner diameter.



Tubing, Saliva Ejector, 7/32" PN **95-0288** Beige

PN **95-0288G** Gray PN **95-0288W** White Saliva ejector tubing, 7/32" inner



Tubing, Micro Irrigator and Evacuator, 1/8"

PN **95-0289G** Gray PN **95-0289W** White Micro irrigator/evacuator tubing, 1/8" inner diameter.



Tubing, Jacket PN **95-0290** Beige (5/16") PN **95-0290W** White (5/16") PN **95-0291** Beige (3/8")

PN 95-0291W White (3/8") Tubing, Jacket 5/16"-3/8", inner diameter for A/W Syringe.



Tubing, Umbilical Jacket

PN 95-0323 (1 1/4") PN 95-0324 (1 1/2") Umbilical Jacket Tubing. Sold by the foot. Note: use larger size if unit has solids trap canister.



Tubing, Dual Lumen, 1/8", 15ft

PN **95-0327** Beige PN **95-0327W** White Used for handpiece holder signal. 1/8" Outer diameter.



Tubing, Steel Wire Reinforced, 5/8"

PN **95-0305** Vacuum tubing, 5/8" inner diameter. Average self-contained system uses 3'.



Tubing, Evacuator, 3/8"

PN **95-0380** Micro evacuator tubing, 3/8" inner diameter, White.



Tubing, Air-Water Syringe,

PN **95-0213** White (60") Air-Water Syringe Tubing Assembly with Strain Relief. 60" tubing length. Syringe head not included.



Tubing, Air-Water Syringe,

PN **95-0214** White (50") Air-Water Syringe Tubing Assembly with Strain Relief. 50" tubing length. Syringe head not included.



Tubing, Handpiece, Non-Fiber Optic, 50" or 60"

PN **95-0203W** White (50") PN **95-0202W** White (60") Non Fiber Optic Handpiece Tubing Assembly. For High Speed and Low Speed air driven hand pieces. Connects to 7/8" bulkhead. For systems sold after 6/1/2006



Tubing, Handpiece, Fiber Optic, 50" or 60"

PN **95-0265W** White (50") PN **95-0114W** White (60") Fiber Optic Handpiece Tubing Assembly. Includes 6-Pin standard adapter. Bulb sold separately. For 5/6 pin tubing. Connects to 7/8" bulkhead. For systems sold AFTER 6/1/2006.



Tubing, 1/8" OD, 1/16" ID, 15ft length

PN 95-0109B (Blue) PN 95-0109BK (Black) PN **95-0109C** (Clear)

PN **95-0109CB** (Clear w/Blue Stripe)

PN **95-0109G** (Gray) PN **95-0109Y** (Yellow) Tubing, 1/4", Water or Air Line, 15ft length

PN **95-0322B** (Blue) PN 95-0322BK (Black) PN **95-0322C** (Clear) PN **95-0322Y** (Yellow)

ABOUT ASI HOLDERS

We provide numerous size and types of holders to accommodate various instruments. They are designed to fit ASI's holder bar.

AUTO – Automatically activates handpiece or instrument when foot control is pressed. A small ball in the back of the holder base pops out when the instrument is removed. An optional lever is available for the side of the holder for locking out the handpiece.

STANDARD – Used to secure instruments that are hand operated only (i.e.: air water syringe).

UNIVERSAL – Used for standard air handpiece connections and other instruments that utilize that same shape.

CUSTOM – Accommodate exact fit of various instruments. Refer to part number to locate correct holder.

COLOR - Choose beige or white.

Please Note: ASI Handpiece Holders are available for sale only to customers with ASI delivery systems. These holders will not fit other brands of delivery units, and require ASI's 12-sided holder bar design. Contact ASI Customer Support with questions.

SEE SECTION 2 FOR DECALS.

AUTO HOLDERS



STANDARD HOLDERS



Universal

95-2793A

Universal Fit - NSK Nano, KaVo, Air driven handpieces

Custom

95-2793B Aseptico, ProMark 95-2793C TCM III. IV **95-2793D** Satelec

95-2793E NSK Ultrasonic, Non-Optic

95-2793F ENAC Ultrasonic

95-2793G NSK Ultrasonic Optic

95-2793H ATR Technika 95-2793 NSK EndoMate, MMC

95-2793J Bein Air EHLS

95-2793K Nouvag Implant

95-2793L Sybron Ultrasonic

95-2793M HVE

95-2793N Adec, Fiber Optic

Universal

95-2794A Universal Fit - Micro Evacuator A/W syringes

95-2794B HVE Fit

Custom

95-2794C NSK EndoMate

95-2794D Calamus or B&LAlpha

95-2794E System B-Touch & Heat

95-2794F Elements OU

95-2794G Elements SB

95-2794H Aseptico

95-27941 TCM III & IV

95-2794J HSK Ultrasonic, Non-Optic

95-2794K NSK Ultrasonic

95-2794L ATR Technika

95-2794M Satelec Ultrasonic

95-2794N ENAC US/Zip

95-27940 Nouvag Implant/Zip

95-2794P Microetcher

95-2794Q Sirona Cordless X-Smart IQ

95-2794R Tri Auto ZX II

95-27945 NSK Endomate TC2

Please call 800.566.9953 if you are unsure which holder you need.



Control Block Diaphragm **Pucks**

PN **95-0215** Full set


PN **95-0215-1** Single set Full or single replacement set of diaphragm pucks for control blocks installed in ASI delivery systems made beginning 10/24/2006 - SN 592794. Full pkg 12 sm pucks, 6 lg pucks. Single pkg 2 sm pucks, 1 lg puck.



Control Block Diaphragm, 5 Position, Set of 2

PN **95-0076**

Set of 2 (SN 591056-592793*. For SN 591055* and earlier, please upgrade control block to PN 95-0295. For SN 592794 and later, see PN 95-0215).

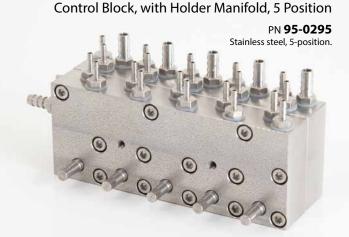



7/8" Bulkhead connector for pneumatic handpiece. Starting with SN 592654. Adapts to 3/4" holes for prior serial numbers.



Syringe, Air Only, with **Dryer Cartridge Chamber**

PN **95-0364**

Air only syringe with air filter in handle.



Syringe, 3-Way

PN **95-0235**

3-Way syringe.



Syringe Tip, AutoClavable

PN **95-0010**

AutoClavable syringe tip.



Syringe, Stropko Adapter

PN 95-0375 (2")

PN 95-0376 (4")

Clear away dust and air-dry the canal system.



Gasket, Pneumatic Handpiece, 5 Hole 3/4", Set of 5

PN **95-0208**

5-Hole Pneumatic Handpiece gasket, for 3/4" bulkhead. Pkg of 5. Large strain for fiber optic handpiece.



Gasket, Pneumatic Handpiece, 4 Hole 7/8", Set of 5

PN **95-0206**

4 Hole Pneumatic Handpiece gasket, for 7/8" bulkhead. Pkg of 5. Small strain for fiber optic handpiece.



Valve, Needle, High Precision

PN **95-0204**

Needle Valve for precision adjustment of air/water syringes, air only syringes, chip air control and high speed hand piece water adjustment. Stainless steel.



Repair Kit, Syringe

PN **95-0089**

Includes two syringe button cartridges, springs and o-rings, syringe tip o-ring, silicone and allen wrench.

SECTION 3: DELIVERY SYSTEM REPAIR PARTS



Oil Mist Recovery Jar

cotton 2×2 for absorbency.

Oil Mist Recovery Jar - fill with one

PN **95-0258**

PN **95-0242**

Toggle assembly switch, foot control, wet/dry. Starting with SN 595369* and after. For SN 595368* and earlier, please upgrade foot control with PN 95-0254.



Foot Control Toggle, Set of 2

PN **95-0111**

Foot Control Toggle only, pkg of 2.



Repair Kit, Foot Control

PN **95-0094**

Foot Control Repair Kit (for units SN 595368* and earlier).



Repair Kit, Foot Control

PN **95-0240**

Foot Control Repair Kit. For units starting with Serial Number 595369 and after. For units prior to SN 595369, please see PN 95-0094.

TECHTIP:

OIL MIST RECOVERY JAR

(95-0258)

nd place one cotton 2x2 for ab

HANDPIECE AUTO-HOLDER STICKING OR LEAKING AIR.

- If actuator ball sticks and doesn't pop out to allow handpiece to run
 when pressing the foot control, the ball may be stuck due to being
 gummed up from disinfectant. To clean, use a paper towel or cloth
 and try moving the ball back and forth to free. If this fails to clear it
 the holder will need to be replaced.
- If the holder is leaking air around the actuator ball, it could be two
 different causes: the control block diaphragm has a hole in it and is
 allowing air to exhaust back out of the holder, or the o-rings inside
 the holder have dried out.
- Do not use bleach or hydrogen peroxide to clean holders.

FOOT CONTROL STICKING.

 If the disc is sticking or leaking air, a rebuild kit may be needed, or grease the valve o-rings with silicone grease. Caution - use only silicone lubricant when lubricating instrument o-rings. Petroleum products will cause permanent damage to the o-rings.

NOTE: in some cases, air leaking from the foot control is due to a hole in the control block diaphragm. Replace the diaphragm(s) in the control block.



Switch, Air Electric, Normally Closed

PN Black Body **95-0138** Air Electric Switch (Normally Closed). Used to select hand pieces from specific auto-holders (eg. dual ultrasonic and auto vacuum holders) Order one switch per instrument, Ideal replacement interval is every 3-5 years. Formerly PN 80-0199.



Switch, Air Electric, Normally Open

PN **95-0137**

Air Electric Switch (Normally Open). Used to send signal from foot control. Order one switch per instrument. Ideal replacement interval is every 3-5 years. Formerly PN 80-0198.



Replacement for Microetcher, 0-60 psi

PN **95-0145**

Pressure Gauge, Replacement for Microetcher, 0-60 psi.



PN **95-0300**

Toroidal transformer (Revision D), Dual input voltage, 9V, 24V, and 28V AC outputs, Includes mounting plate for retrofit of square transformers.



Gauge, Pressure, Handpiece, 0-100 psi

PN 0-100psi HP **95-0136** Handpiece Pressure Gauge, Rectangular (0-100 psi).



Gauge, Water System Bracket, 60psi

PN **95-0266**

Pressure gauge for Water Bottle Bracket system (60psi). For systems sold 05/2005 and later.



Gauge, Air Pressure, Endo, 0-30 psi

PN **95-0151**

Endo Air Syringe pressure gauge, round (0-30 psi).



Regulator, Endo Air Syringe

PN **95-0361**

Replacement regulator for endo air syringe. For replacement endo air syringe gauge, see PN 95-0151.



Switch, Toggle, **Dual Pole**

PN **95-0249** Dual pole toggle switch.



Switch, Toggle, Single Pole

PN **95-0250**

Single pole toggle switch.



Switch, Rocker

Dual pole rocker switch for AC120 Compressor and Vacuum Pumps on selfcontained delivery systems.



PN **95-0296**

(2-position). On/Off switch for Air



Ouick Connect Convenience Outlet

PN **95-0248**

Quick Connect - Air or Water Convenience Outlet.



Switch, Circuit Breaker, Push Button, 15 amp

PN **95-0174** 15amp.

PN **95-0174-X** 1amp or 2amp 15 amp - circuit breaker switch. 1 amp -ELS (Rotary), Ultrasonic; 2 amp - EHLS.



Quick Connect, Male, 1/4"

PN **95-0341**

Male air quick connect with compression fitting for 1/4" outer diameter tubing.



Quick Connect, With Plug, Male, 1/4" Air

PN 95-0341P

1/4" male air quick connect with 10/32" removable plug. Plug can be used with 1/16" or 1/8" barbs.



TECH TIPS:

WATER NOT FLOWING FROM HANDPIECES OR AIR/WATER SYRINGE.

- Check water bottles and ensure they are full, switched on, and that air pressure gauge is reading around 25-35psi.
- Try switching the bottle selector valve from one bottle to the other, as it may be clogged and need replacement.
- Bottle threads are worn and not sealing correctly. Replace bottles annual or sooner if necessary.

WATER NOT FLOWING TO HANDPIECES.

- Check to see if water is not flowing from any handpiece to determine if it is isolated to just one tubing. Ensure that all flow control valves for water have been opened.
- Check the water on/off toggle located on the foot control to see if it is working. Replace if necessary.
- Check the water output side of the relay by disconnecting the tubing from the relay to the control block and pressing the foot control. If still no flow, replace water relay valve.



Water System Disinfecting Cartridge, DentaPure®

PN **95-0281**

DentaPure in-line pick up cartridge with non-allergenic isotopic iodine. Prevents build-up of biofilm in tubing without harsh chemicals or powders that may damage the internal components of the delivery system. Lasts 365 days.



Valve, Water Relay

PN **95-0135**

Stainless Steel Water Relay Valve. Proportionate retraction eliminates need for anti-retraction valves.



Bracket, Tandem Bottle Upgrade

PN **95-0382**

The Tandem Water System requires just one DentaPure, and eliminates the manual bottle selector switch. On/Off toggle valve is self-relieving and will depressurize bottles in the off position. DentaPure not included.



Tubing, Water Bottle Uptake

PN **95-0284**

Replacement pick up tube for water bottle uptake.



Valve, On/Off Relieving **Toggle for Water System**

PN 95-0352

Brass On/Off Toggle for water systems. Relieving type exhausts air when turned off. Not for use with irrigation bracket. For units made before 03/12/2018



Regulator, Closed Water System, 35 psi Inline

PN **95-0216**

Mini Inline Regulator for Closed Water System - 35 psi.



Bottle, Water, 1 Liter, Closed System

PN **95-0140** (28mm, 1")

PN 95-0347 (38mm, 1.5") 28mm - for systems built BEFORE 7/1/2011, 38mm - for systems built AFTER 7/1/2011. Includes either an O-Ring (95-0347) or 5 replacement gaskets (95-0140).



Pressure Head, Replacement for Tandem Water System

PN **95-0367**

Pressure Head, Replacement for Tandem Water System (carts after 11/06/17).



Check Valve Replacement Kit for Tandem Water **Bottle System**

PN **95-0387**

Check Valve Replacement Kit for Tandem Water Bottle System.



Valve, Routing Selector, Toggle

PN **95-0143**

Routing selector valve (toggle between bottle 1 and 2) for units made before 03/12/2018. Stainless steel. Replaces rotating dial in older ASI units. Also used as on/off switch on bottle brackets for units made 03/12/2018 and after.



Pressure Head, Closed Water System

PN **95-0142**

Closed Water System Pressure Head 38MM neck size (without Gauge) For systems sold between 06/01/2011 and 11/06/2017.



Gasket, Pressure Head, 28mm, Set of 10

PN **95-0146**

Gasket for closed water system (white). For 28mm neck size bottles (fits PN 95-0140), pkg of 10.

TECH TIP: CLEAN WATER SYSTEM - DENTAPURE

The system is equipped with a refillable water bottle system that uses compressed air to pressurize the water. Depending on your cart configuration, your system may have a single or tandem dual water bottle system. Tandem systems let water flow from the second bottle directly into the first bottle to provide extra capacity.

For water line disinfection, the system is equipped with a DentaPure DP365 cartridge that is contained in the primary bottle. The cartridge will work for one year before needing replacement.

To use the system, unscrew the bottles and clean appropriately. Remove the protective cap from the base of the blue DP365 cartridge. Fill the bottle(s) with low mineral water to a level below the neck of the bottle and reattach. Ensure the bottles are firmly tightened to prevent air leaking. Flip the switch to ON to pressurize the bottles.

IMPORTANT – Do not use tablets, bleach or other caustic liquids in the water system as they may damage internal components. It is recommended to use the DentaPure cartridges in the system for water line disinfection.

SECTION 5: SUCTION INSTRUMENTS & SUPPLIES



Solids Trap Canister, Bottom Port, Large

PN **95-0175**

For assistant's packages and classic cart with drawers.



Solids Trap Canister, Side Port, Large

PN **95-0247**

Canister/Solids Trap, large size with side drain. (For units built after 10/2003).



Lid, Large Solids Trap, with O-Ring

PN **95-0121**

2 1/8" x 2 1/4" #34 - Fits PN 95-0247 Canister and PN 95-0175 Canister.



Solids Trap Screen, Large with Lid, Set of 25 or 144

PN **95-4054** (25), PN **95-0088** (144) 2 1/8" diameter (for units built after 10/27/2003).



O-Ring, for HVE Barb or Spool, Set of 10

PN 95-4040

HVE Barb or Spool O-Ring, pkg of 10.



O-Ring, Saliva Ejector Nose Cone or Micro Evacuator, Set of 10

PN 95-4041

SE & ME Tip O-Ring, pkg of 10.



O-Ring for Solids Trap Lid, Set of 5

PN Small **95-0091**

PN Large **95-0091L**

Small – 1 7/8" x 2" #32 (PN 95-0091) – Fits small solids canister only, units made before 10/2003. Large - 2 1/8" x 2 1/4" #34 - Fits PN 95-0121 Lid, PN 95-0247 canister, and PN 95-0175 canister.



Auto Suction Upgrade Kit

PN **95-0405**

Auto suction upgrade kit.



Spool Assembly, Ergo HVE & SE

PN **95-0230**

Titanium spool assembly for Ergo high volume evacuator and saliva ejector.



O-Ring, Standard Irrigator & Saliva Ejector

PN **95-4034**

O-Ring for saliva ejector or standard micro irrigator connector. Pkg of 10.

Suction Handpieces



PN 90-2758 Straight HVE



PN 90-2759 Saliva Ejector



PN **90-2762E** Ergo Angle HVE



PN 90-2763 Micro Evacutator



TECH TIP:

Use ASI approved O-Ring grease PN **95-0085**. Do not use petroleum jelly products, as they will damage o-rings.

KEEP CLEAR TM



Keep Clear Atomizer Bottle, 8oz. Solution PN **95-0320**

Adapter partners with your ASI suction handpieces to atomize concentrate directly without needing to dilute. Includes atomizer top, 8 oz. bottle and 8oz. of Keep Clear evacuation cleaner.



PN **95-0278-C4**

Keep Clear - One case of four 1-gallon containers and free dispenser pump.



PN **95-0278**

Keep Clear is a natural, enzyme-based, non-foaming evacuation system cleaner designed for your ASI unit.

Keep Clear Dispenser Pump

PN **95-0279**

Quickly dispenses Keep Clear suction system cleaner in 1oz, increments.

TECH TIP: CLEANING THE EVACUATION SYSTEM - KEEP CLEAR

The following are critical criteria for cleaners to maintain your ASI **Suction System:**

#1) MUST HAVE PROTEASE ENZYME

Protease is a class of enzyme that is highly effective at breaking down the protein solids in blood and saliva. The protease enzyme has proven effective in keeping the walls of the suction tubing and canister clean and odor free.

#2) MUST BE NON-FOAMING

The suction cleaner needs to be non-foaming to prevent foam from being suctioned down into the vacuum pump.

#3) MUST BE PH BALANCED

Cleaning solutions must be pH balanced between 6 to 8 (on a scale of 1 to 14). If the solution is not pH balanced it can release the mercury from the amalgam, causing it to be flushed with the water discharge and not collected (eventually reaching water ways and streams). This is an EPA requirement when using an amalgam separator.

DON'T USE BLEACH!

SECTION 6: PORTABLE COMPRESSOR SYSTEM PARTS



Trying to rebuild your compressor? Does your compressor look like this?

> All other individual parts for the compressor, like the check valve or pressure switch, can be used to replace faulty parts on either compressor model.



PN **95-0197**

pressure (100psi), 120V.

Compressor Manifold

PN **95-0416**

For 115v compressor, includes pressure switch, check valve, solenoid, and brass assembly.



Rebuild Kit, Compressor

PN **95-0378**

Repair Kit, Air Compressor PN **95-0069**

Trying to rebuild your compressor?

Does your compressor look like this?





Compressor Manifold

For dual voltage, compressor, includes pressure switch, check valve, solenoid, and brass assembly.

TECH TIPS:

COMPRESSED AIR VOLUME IS REDUCED.

- Piston cups in pump are worn. Use rebuild kit to replace. Verify correct version.
- Leak in regulator. Replace regulator assembly with correct version.
- If compressor is running constantly, the unloader solenoid may be sticking open. Replace solenoid.
- Water bottle not sealing. Repalce gaskets or bottles.
- Gasket on handpiece is worn or not tight. Tighten handpiece adapter firmly or replace gasket.

• Air leaks in tubing. Locate leak and replace tubing and/or fittings.

COMPRESSOR WILL NOT START

- If the compressor has a pungent electrical smell, it may be stalling when attempting to start. The problem is usually check valve allowing air back in and back pressuring the heads. Remove check valve. Clean or replace valve PN 95-0108.
- Start up capacitor may need replacement.

SECTION 6: PORTABLE COMPRESSOR SYSTEM PARTS



Regulator, Manual Drain, **Body Only**

PN **95-0178A**

Replacement regulator for units with SN 170101 to SN 190820. Unit must already be equipped with air tank purge valve on the back door of delivery system.





Regulator, Remote Mount, **Body Only**

PN 95-0178C

Regulator, air tank assembly, manual drain, remote mount. Replacement regulator for units with SN 190820 and after.



Muffler, Vacuum & Air Compressor

PN **95-0163**

Muffler for vacuum pump and air compressor (filter silencer).



Attenuator Assembly, Air Compressor

PN **95-0162** Attenuator for air compressor.



Pressure Switch, Air Compressor, 100psi

PN **95-0264**

100psi Air Compressor Pressure Switch. For self-contained systems with aluminum air tanks, sold after 06/2006.



Capacitor, Air Compressor, **Dual Voltage**

PN 95-0124

Capacitor for dual voltage air compressor (#25L567). For units manufactured with SN 180319 and earlier. For SN 180320 and later, please see PN 95-0398.



Capacitor, Air Compressor 115V

PN **95-0063**

Standard capacitor for 115V compressor (#27L572). For Units with SN 180313 and before. See PN 95-0398 for SN 180314 and after.



Check Valve, Compressor Manifold

PN **95-0161**

Compressor manifold check valve. Nickle plated. See PN 95-0108 for check valve repair kit.



Repair Kit, Check Valve

PN **95-0108**

Check valve repair kit. Nickle plated. (Used after 9/2004). See PN 95-0161 to replace entire check valve assembly.



Valve, Solenoid, 2 Way, **Dual Voltage Systems**

PN 95-0228

2-Way solenoid valve for dual voltage systems.



Valve, Solenoid, Miniature Exhaust, 3 Way

PN **95-0177**

Miniature exhaust solenoid valve, 3 way (120 volt/60 hertz only).



Valve, Air Tank Purge, Body Only

PN **95-0394**

Replacement air tank purge valve, body only. For self-contained units with a manual drain regulator PN 95-0178A or PN 95-0178C.



Valve, Air Pressure Relief, Pop-Off Assembly, 90 PSI

PN **95-0349**

90 psi. For umbilical systems made after 09/2004.





look like this?


All other individual parts for the vacuum pump, like the check valve or pressure switch, can be used to replace faulty parts on either vacuum pump model.



Rebuild Kit, Vacuum Pump

PN **95-0378**

Repair Kit, Vacuum Pump PN **95-0068**

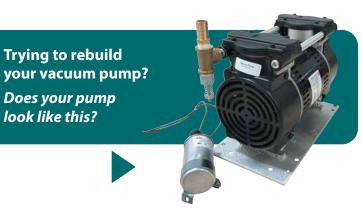



High Flow Vacuum Rebuild Kit

PN **95-0431**

Repair Kit for Thomas 2755 Series high flow pump.



Capacitor, Replacement for **High Flow Pump**

PN **95-0432**

Replacement capacitor for Thomas 2755 Series high flow pump.



Capacitor, Replacement for Compressor and Vacuum

PN **95-0398**

For compressor PN 95-0197 & PN 95-0159D (40-0080) and vacuum Pump PN 95-0167 & PN 95-0167D (40-0081). For units with SN 180314 and after. See PN 95-0063 for compressor capacitor replacement on units SN 180313 and before. See PN 95-0064 for vacuum capacitor replacement on units SN 180313 and before.



Leaf Valve, Vacuum and Compressor Pump, Set of 2

PN **95-0127**

Fits all models of vacuum pumps, as well as compressor pumps on units manufactured with SN 180319 and later.





AMALGAM SEPARATOR

This disposable, unit-mounted amalgam separator mounts to the back door of self-contained systems with internal vacuum pumps.

The internal suction canister is purged through the separator to capture amalgam particles. A dove-tail bracket design with push-torelease connectors simplifies replacement of cartridges.

The separator is designed as a Type 3 amalgam separator, and is tested to ISO 11143. The filter should be changed every six months or sooner, depending on usage.



Cartridge, Replacement PN **95-0332**

Includes replacement cartridge only. Brass quick connects should be reused but can be replaced see PN 95-0333.



Connector Replacements, Set of 2

PN **95-0333**

Replacement brass quick connects for ASI's externally mounted Amalgam Separator. Set of two (in-flow and outflow connections).



Amalgam Separator Recycle Kit

PN **92-DDRE5.0**

For dispsal of amalgam separator cartridges and other dental waste. Comes with prepaid return shipping label. Holds 5-6 cartridges.

Sediment Bowl, Bottom Drain

PN **95-0339**

This upgrade kit allows the suction canister to drain faster without the constant need to empty the sediment bowl (still recommend cleaning sediment bowl annually).

What's included:

A replacement sediment bowl with a bottom drain.

A replacement purge hose.

A plug for side of the canister.

Complete installation instructions.



TECH TIPS:

VACUUM IS LOW.

- Replace solids trap screens.
- Crack in tubing or solids trap collector housing. Replace housing if required.

Vacuum motor will not start.

- The suction canister is full and the overflow switch is engaged. Purge the suction canister completely.
- The autoholder for the suction handpiece may be locked out. Remove the suction handpiece from the holder and ensure the lever is pointing down to the floor.
- · Start up capacitor may need to be replaced.

SUCTION CANISTER WILL NOT PURGE

- The pick-up tube in the canister is clogged. Remove and clean sediment bowl per operation manual instructions.
- Peristaltic purge hose tubing is clogged or misaligned in the pump. Try massaging tubing to clear or adjust tubing in the pump. Replace tubing if necessary.



Purge Pump Assembly, **Purge System**

PN **95-0293**

Includes bracket, motor & head. (Starting with SN 592735).



Purge System, Waste Purge Pump

PN **95-0170**

Waste purge pump, air driven. (SN 592735 and earlier).



Purge Pump, Shurflo, Replacement

PN **95-0402**

Purge pump, shurflo, replacement, tubing not included (See PN 95-0400).



Purge Pump, Shurflo, Retrofit Kit

PN **95-0404**

Purge pump, shurflo, retrofit kit.



Tubing, Replacement **Purge Hose**

PN **95-0400**

Tubing, replacement purge hose, internal assembly, for shurflo purge pump.



Hose Assembly, Side Drain, Waste Purge System

PN **95-0205**

Waste purge hose assembly (peristaltic), side drain.



Purge Hose Assembly, **Bottom Drain**

PN 95-0334

Replacement purge hose assembly for bottom drain sediment bowl.



Bottom Drain Purge Hose

PN **95-0403**

For international and DV carts only. For units made 9/2019 and after.



Inline Filter Screens

PN **95-0423**

Inline filter screens for replacement of purge tubing filter PN 95-0400.



Tubing, Purge Hose, with Plug

PN **95-0401**

Replacement purge hose tubing, external assembly. Only compatible with units with male quick connect purge assembly on chassis for SN 200102 and after.



Hose, Waste Purge, Purge System

PN **95-0306**


Waste purge hose external assembly with plug.



Plug, Purge Tube, Replacement

PN **95-0362**

Plug, purge tube, replacement.

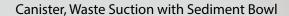

PN **95-0343**

Replacement suction waste canister for self-contained units. Includes waste canister and sediment bowl with bottom drain. Canister pre-fitted with float switch assembly (shuts off vacuum if canister overfilled).







Relay, 25 Amp PN **95-0328** Solid state 25 amp relay for self contained delivery units. Use for units with SN 180118 and before.



Vacuum Relay, 25 Amp PN **95-0370** Solid state 25 amp relay for self contained delivery units. For units SN 180119 and after.




Relay, Indicator PN **95-0371** Relay, Indicator, SN 180119 and after.



115V PN **95-0064** For units with SN 180313 and before. See PN 95-0398 for 180314 and after.

Capacitor, Vacuum Pump

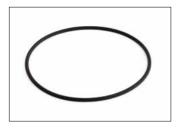

O-ring, Sediment Bowl PN **95-0391** O-ring, sediment bowl.



Filter, for Muffler, Set of 2 PN **95-0093** Fits inside muffler on both the vacuum and compressor pump, pkg of 2. See PN 95-0163 to replace entire muffler.



Valve, Vacuum Relief PN **95-0168** Vacuum relief valve.



Nitrous Exhaust Retrofit Kit PN **95-0359** Nitrous Exhaust Retrofit Kit.

Attenuator Assembly, Vacuum Pump PN **95-0169** Attenuator assembly for vacuum pump.



SECTION 7: INSTRUMENTS – ULTRASONICS



Upgrade Kit, Satelec Ultrasonic

PN **95-0222**

The SATELEC digital ultrasonic upgrade kit is designed for units built prior to 6/22/07. Includes display panel mount, Newtron module, handpiece tubing, harness and transformer. Large Strain relief. For units made after 6/01/06.

Ultrasonic Upgrade Kit, Small Strain Relief

PN **95-0383**

The SATELEC digital ultrasonic upgrade kit is designed for units built prior to 6/22/07. Includes display panel mount, Newtron module, handpiece tubing, harness and transformer. Small Strain relief. For units made before 6/01/06.

Handpiece, Satelec Ultrasonic PN **92-ASF12281**

Satelec Ultrasonic Handpiece

Display, Digital Satelec Ultrasonic

PN **95-0199**

Satelec ultrasonic 7 segment display. Rev D for systems made AFTER 12/2011. Not compatible with units built prior to 06/22/2007. See Ultrasonic upgrade kit (95-0222).



Module, Satelec Ultrasonic SP Newtron

PN **95-0198**

Satelec ultrasonic SP Newtron module.



Tubing, Satelec Ultrasonic Handpiece

PN **95-0123L**(60")

PN 95-0123LS (60")

Order the PN 95-0123L Large strain relief (7/8") for units manufactured after 06/01/2006. Order the 95-0123LS Small strain relief (3/4") for units manufactured prior to 06/01/2006. For analog units, you must also order the adapter harness PN 95-0316.



Harness, Wiring for Satelec Ultrasonic, Digital

PN **95-0200**

Satelec ultrasonic wiring harness (digital).



Harness, Wiring for Satelec **Ultrasonic Analog**

PN **95-0201**

Satelec ultrasonic wiring harness (analog) with knob controlled power potentiometer.



Harness, Wiring for Analog Ultrasonic Adapter

PN **95-0316**

Connects analog control units to digital



Tubing, EMS/Mini Endo

PN **95-0267**

Tubing, EMS/Mini Endo.

TECHTIP:

ULTRASONIC DISPLAY LIGHTS UP, BUT NO, LOW OR INTERMITTENT POWER TO HANDPIECE TIP.

- Replace with new and correct brand of tip.
- Replace with a different handpiece to verify handpiece is working. Replace handpiece if required PN 92-ASF12281.
- Tubing may have worn or broken wires. Verify line continuity with multi-meter. Replace if required PN 95-0123.
- Newtron Module may not be working. Substitute with a different module to verify. Replace if required PN 95-0198.

SECTION 7: INSTRUMENTS - ELECTRIC MOTORS



PN **92-KV1011.7200** Fits KaVo Eletromatic Plus, Premium & Premium Dual.



Aseptico DTC Motor/Cord Replacement

PN 92-AIAE-4B-30 For Aseptico AEU -25 Endo DTC, AEU -70 7Av2 and AEU 17Bv2.

TECH TIPS:

ROTARY MOTOR/ULTRASONIC: RUNS WHEN NOT PRESSING FOOT CONTROL; STOPS RUNNING WHEN FOOT **CONTROL IS PRESSED.**

- The contacts in the air electric switch are not working. Replace the switch (PN 95-0137).
- Make sure the correct adjustment stem on the control block portion for that handpiece has been opened to allow air flow to the handpiece or activation switch for electric instruments.

HANDPIECE OR INSTRUMENT DOES NOT OPERATE.

- Verify the lock out lever on the side of the holder is pointing straight down to the floor.
- Make sure the correct adjustment stem on the control block portion for that handpiece has been opened.





PN **95-0252**

Gun cradle stand for Obtura III Max. Does not include protector or gun.



PN 95-0120

Obtura gun protector, includes two 6/32 x 1/2" screws. Does not include cradle or gun.

SECTION 7: INSTRUMENTS - IRRIGATION



Handpiece, Micro Irrigator for Standard Irrigation

PN **95-0271**

Titanium micro irrigator handpiece (standard irrigation). Integrated slip luer with lock luer option. Replaceable push button assembly.



Valve, Standard Irrigator, Replacement

PN 95-0192W

Standard irrigator valve replacement. Titanium for PN 95-0271.



Handpiece, Active Irrigator

PN **95-0325**

Titanium handpiece body for active irrigator. Includes replaceable button valve (positive pressure) assembly. Sonic Orbiter and plastic handle not included.



Irrigator Valve, Active Irri-Vac Replacement

PN **95-0245P**

Replacement titanium irrigator valve for Sonic (active) Irri-Vac PN 95-0325. Positive pressure.



Active Orbiter Assembly

PN **95-4045** Active orbiter assembly.



Active Irrigator Nose Cone

PN 95-3026 R, G or O

Titanium tip for active irrigation handpieces. Replaces plastic nose cones for more durable threads. Select from red, orange, or green.



Irrigator Rinse Cup

PN **95-0283**

Convenient method for soaking handpieces overnight. Simply fill cup with water, place in holder, and leave in cup overnight.



Irrigation Bottle, Brown, 16oz

PN **95-4026**

Amber (brown) irrigation bottle with sealing cap. 16 oz, 28mm, (for systems built prior to 2005).



O-Ring Kit, For Active Orbiter

PN **95-4046**

Active orbiter O-ring kit, includes #1 1/2, #6, #8. Pkg of 5 each size.



O-Ring, Silicone #1 1/2, #6 or #8, Set of 10

PN 95-4042 (#1 1/2)

PN **95-4043** (#6)

PN 95-4044 (#8)


O-Ring, Silicone #1 1/2, #6 or #8. Pkg of 10.



O-Ring, Standard Irrigator & Saliva Ejector

PN **95-4034**

O-Ring for saliva ejector or standard micro irrigator connector. Pkg of 10.

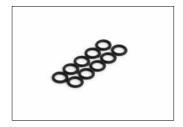

O-Ring For Small Irri-Vac Connector, Set of 10

PN **95-4035**

0.125" inside diameter X 0.187" outside diameter. Fits standard and active IrriVac connector valves. Pkg of 10.



Connector Valve, Active Irri-Vac, Positive

PN **95-0225** Positive Connector valve for active Irri-Vac with positive.



Connector Valve, Irri-Vac

PN **95-0227** For standard Irri-Vac.



Connector Valve, Standard Irrigation Handpiece

PN 95-0234

Connector valve for standard irrigation handpiece. Includes built-in shut-off of solution when handpiece is removed for cleaning.



Color Code Ring

PN 95-0272R, G or O

Color code ring for irrigation handpieces. Select from green, orange, or red.

SECTION 7: INSTRUMENTS - IRRIGATION



Bracket, Micro Irrigator

PN Single **95-0116S** PN Dual **95-0116D** PN Triple **95-0116T**



Tubing, Air Supply, Micro **Irrigator System**

PN **95-0173**

Air supply tubing for micro irrigator system. Includes regulator and on/off toggle.



Regulator, 22-23 psi, Titanium, for Irrigation

PN **95-0171**

Inline regulator check valve assembly for irrigation bracket (22-23psi). For systems sold 10/1/08 or later.



Valve, Titanium, for Irrigation Bracket

PN 95-0259

On/Off toggle valve for irrigation systems. Relieving type exhausts air when turned off.



Pressure Head, Irrigation System

PN **95-0153**

Irrigation system pressure head 38MM with titanium barbs (for systems sold after May 1, 2006 - SN 592637 and after).

TECH TIPS: IRRIGATION

- Always use O-Ring grease when installing or replacing parts. Do not use petroleum Jelly such as vaseline as it will corrode the o-ring.
- To prevent corrosion, use only ASI barbs and fittings for connecting irrigation tubing.

IRRIGATION HANDPIECE DRIPS OUT THE END OR BUTTON **STICKS**

- May need to be flushed with water or soak handpiece overnight. Order rinse cup PN 95-0283.
- O-rings in valve are worn. Replace button valve PN 95-0192 or PN 95-0245.

IRRIGATION HANDPIECE LEAKS AROUND BASE OF HANDPIECE

- Connector may be leaking and needs to be replaced.
- O-rings are worn and need replaced.

NO OR LOW FLOW PRESSURE OF IRRIGATING SOLUTION

- Line is clogged from dried solution. Run warm water through bottles and lines and soak overnight to dissolve clog. Never allow solution to dry out in lines. Periodically rinse lines with water and flush weekly. Never air dry lines without first flushing lines with water to remove solution.
- Verify flow control is open.
- Air pressure should be 10-23psi maximum. Replace in-line check valve regulator assembly PN 95-0223.
- · Bottle not sealing. Replace gaskets PN 95-0156 or bottles PN 95-4027.

Active irrigation tip not moving


• Orbiter is plugged with dried solution. Soak handpiece in water overnight. Use rinse cup PN 95-0283.

SECTION 7: INSTRUMENTS - IRRIGATION



PN **95-4027L**

Irrigation solution bottle. Comes with cap and label, 8oz. bottle with 38mm opening. For units built in 2005 and after. Select from red, orange, green or blue.

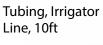

PN **95-0147** (Red) PN 95-0148 (Green) PN **95-0149** (Orange) Irrigation line tubing, 10 feet per pack.





Tubing, Micro Irrigator

PN **95-0115** (50") PN **95-0115L** (60") Micro irrigator tubing for Arm systems, 50 or 60 inch.



Tubing, Active Irri-Vac, Positive Flow

PN **95-0256** (50") PN 95-0256L (60")

Replacement handpiece tubing for active IrriVac. Positive pressure irrigator flow. Suction line and irrigation line.



Gasket, Pressure Head, 28mm, Set of 10

PN **95-0146**

Gasket for closed water system (white). For 28mm neck size bottles (fits PN 95-0140), pkg of 10.



Luer Lock Ring, Finger Snap Adapter, Set of 5

PN **95-0318**

Clear. Goes on titanium irrigator, pkg of 5.



Articulating Irrigator

PN **95-0155**

Articulating irrigator handpiece tubing / articulating (pharmed, beige).





Tubing, Active Irrigation, Positive Flow

PN **95-0243** (50")

PN 95-0243L (60")

Replacement handpiece tubing for active irrigation handpiece. Positive pressure irrigator flow. Air line and irrigation line.



Gasket, Irrigation Pressure Head, 38mm, Set of 10

PN **95-0156**

Gasket for irrigation system (white). For 38mm neck size irrigation bottles, pkg of 10. (For 38mm neck bottles used in 2005 and after).



Luer, Female, Kynar Set of 5 (old style)

PN **95-0150**

Luer, Female, Kynar set of 5 (old style).



Tip Adapter, Micro Irrigator, Set of 10

PN 95-4029 (Red) PN **95-4030** (Clear) shown

Tip adapter, micro irrigator, pkg of 10.



Tubing, Irrigation, Peristaltic

PN **95-0410**

PN **95-0410-20** (20 pack)

Irrigation peristaltic tubing. Works with Bien Air MX-I and ENAC U.S. instruments integrated in ASI carts along with any other external irrigation handpieces.

SECTION 7: INSTRUMENTS - FIBER OPTICS



Fiber Optic Power Pack

PN 95-0229

 $5\ handpiece$ position drive air power pack, $9\ to\ 11$ Volt AC input, 3.4 to 3.7 Volt DC output (HP1 thru HP4). 13 Volt DC output on HP5 (for curing light).





Adapter, Fiber Optic ISO-C, 5 Hole, 6 Pin

PN 95-0139

Fiber optic adapter for 5 hole to 6 pin conversion (for 5/6 Hole universal style tubing).



Bulb, Fiber Optic, Halogen

PN **95-4025**

Replacement fiber optic bulb for ASI's universal 5/6 pin fiber-optic connection (Halogen).



Bulb, LED

PN **95-0282**

LED bulb for ASI universal 5/6 pin fiber optic connection. Brighter, whiter and longer lasting.



Bulb, Fiber Optic

PN **95-0026**

Replacement fiber optic bulb for 5-hole style tubing (for systems sold before 05/01/2005).

LOOKING FOR FIBER OPTIC TUBING - SEE SECTION 2

Drive Coolant Spray Blank Exhaust





ABOUT FIBER OPTICS 5 HOLE OR 6 PIN CONNECTIONS

STANDARD CONNECTION

ASI'S pneumatic connections are standard and accommodate handpieces made to ISO standards. The connection provides:

- Drive Air Air travels up the tubing to operate the turbine in high speed handpieces or the air motor in air-driven low speed handpieces.
- Exhaust Air As drive air leaves the turbine or air motor, it exhausts down this tubing and exits through the oil mist recovery jar.
- Chip Air An air stream which blows onto the cutting bur; assists in removing debris; aids in visibility and cutting while using a

highspeed handpiece. Also used to atomize coolant spray. Not all air driven high speed handpieces are ported for chip air; verify this option for the brand of handpiece being used.

- Coolant Spray Allows water to flow up to high speed handpieces and to be sprayed onto the bur.
- Blank Hole or Fiber Optic Connection -Non-operative, but allows the use of fiber optic handpiece in standard non-fiber optic connection. If tubing is fiber optic, it will have a bulb for 5-Hole connections or two sockets for 6-Pin fiber optic handpiece connections.

SECTION 8: INDEX

	95-0140		95-0215-1		95-0287W	9 9 9 9 9
	95-0143		95-0217	6 7 7 7 7	95-0288G 95-0288W 95-0289G 95-0289W	9 9 9
	95-0145		95-0218 95-0219 95-0220 95-0222 95-0224	7 7 7 7	95-0288W 95-0289G 95-0289W	9 9
	95-0146	15 15, 28 28 28	95-0219 95-0220 95-0222 95-0224	7 7 24	95-0289G 95-0289W	9 9
24 21 25 11 29 23	95-0146 95-0147 95-0148 95-0149 95-0150	15, 28 28 28 28	95-0220 95-0222 95-0224	7 24	95-0289W	9
21 25 11 29 23	95-0147 95-0148 95-0149 95-0150	28 28 28	95-0222 95-0224	24		
25 29 23 18	95-0148 95-0149 95-0150	28 28	95-0224		95-0290	9
11 29 23 18	95-0149 95-0150	28		6		
29 23 18	95-0150		95-0225		95-0290W	9
23		28		26	95-0291	9
18	95-0151		95-0227	26	95-0291W	9
		13	95-0228	19	95-0293	22
19	95-0153	27	95-0229	29	95-0294	7
	95-0155	28	95-0230	16	95-0296	13
23	95-0156	28	95-0233	6	95-0300	13
20	95-0159D	18	95-0234	26	95-0305	9
18	95-0161	19	95-0235	11	95-0306	22
19	95-0162	19	95-0240	12	95-0316	24
11	95-0163	19	95-0242	12	95-0317	6
6	95-0167	20	95-0243	28	95-0318	28
16	95-0167D	20	95-0243L	28	95-0320	17
11	95-0168	23	95-0245P	26	95-0321	6
16	95-0169	23	95-0247	16	95-0322B	9
16	95-0170	22	95-0248	13	95-0322BK	9
23	95-0171	27	95-0249	13	95-0322C	9
12	95-0173	27	95-0250	13	95-0322Y	9
7	95-0174	13	95-0252	25	95-0323	9
18	95-0174-X	13	95-0254	12	95-0324	9
9	95-0175	16	95-0256	28	95-0325	26
9	95-0177	19	95-0256L	28	95-0327	9
9	95-0178A	19	95-0258	12	95-0327W	9
9	95-0178C	19	95-0259	27	95-0328	23
					95-0332	21
12	95-0182	7			95-0336	8
9			95-0267	24		
28	95-0184	7				
			95-0272R, G, 0	26		
	95-0192G, O, R, W	26				
			23 95-0156 28 20 95-0159D 18 21 18 95-0161 19 21 95-0162 19 21 11 95-0163 19 22 20 23 95-0167 20 26 16 95-0168 23 27 23 95-0170 22 28 95-0171 27 29 5-0174 13 29 95-0174 13 29 95-0175 16 29 95-0178 19 29 95-0178 19 29 95-0178 19 29 95-0178 19 29 95-0178 19 29 95-0178 7 29 95-0180 7 20 20 20 20 20 20 20 20 20 20 20 20 20 2	23 95-0156	23 95-0156	23 95-0156 28 95-0233 6 95-0300 20 95-01590 18 95-0304 26 95-0305 21 895-0161 19 95-0235 111 95-0306 21 95-0316 21 95-0162 19 95-0240 12 95-0316 21 95-0316 21 95-0163 19 95-0242 12 95-0317 22 95-0431 28 95-0318 23 95-01670 20 95-0243 28 95-0318 24 95-0169 23 95-0249 26 95-0221 25 95-0249 27 95-0249 26 95-0271 27 95-0228 27 95-0170 22 95-0249 28 95-03228 28 95-03228 29 95-0171 27 95-0249 20 95-0249 21 95-0173 27 95-0250 28 95-0322 29 95-0174 21 95-0256 28 95-0325 29 95-0175 21 95-0256 28 95-0327 29 95-0176 29 95-0178 21 95-0268 21 95-033 22 95-0268 23 95-0370 24 95-038 25 95-038 27 95-038 28 95-0327 29 95-0179 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 29 95-0170 20 95-0256 21 95-0328 21 95-0327 22 95-0269 23 95-0318 24 95-0318 27 95-0266 28 95-0333 28 95-0318 29 95-0318 29 95-0318 29 95-0318 21 95-0328 22 95-0344 23 95-0344 24 95-038 25 95-038 27 95-0366 27 95-0366 28 95-0371 28 95-0371 29 95-0372 29 95-038 21 95-0373 22 95-038 23 95-0374 24 95-039 24 95-039 25 95-039 26 95-0371 27 95-0366 27 95-0366 28 95-0371 29 95-0376 20 95-0376 21 95-0376 21 95-0376 22 95-038 23 95-0376 24 95-0378 25 95-038 27 95-0366 28 95-0371 28 95-0371 29 95-0370 20 95-0371 21 95-0370 22 95-038 23 95-0371 24 95-0375 25 95-0371 26 95-0371 27 95-0366 28 95-0371 29 95-0375 20 95-0371 21 95-0375 22 95-0371 23 95-0375 24 95-0375 25 95-0371 26 95-0371 27 95-0371 28 95-0375 29 95-0375 20 95-0375 20 95-0375 20 95-0375 20 95-0375 20 95-0375 2

PART NUMBER	PAGE	95-041618
95-0378		95-0417
95-0380		95-0423
95-0382	15	95-04247
95-0383	24	95-04257
95-0384	6	95-042914
95-0387	15	95-043120
95-0389	14	95-043220
95-0391	23	95-2793A10
95-0392	20	95-2793B10
95-0394	19	95-2793C10
95-0396	8	95-2793D10
95-0398	20	95-2793E10
95-0399	8	95-2793F10
95-0400	22	95-2793G10
95-0401	22	95-2793H10
95-0402	22	95-2793110
95-0403	22	95-2793J10
95-0404	22	95-2793K10
95-0405	16	95-2793L10
95-0408	6	95-2793M10
95-0410	28	95-2793N10
95-0410-20	28	95-2794A10
95-0413	23	95-2794B10

95-27940	C10
95-2794[)10
95-2794E	E10
95-2794F	F10
95-27940	510
95-2794	H10
95-27941	10
95-2794	J10
95-2794	(10
95-2794l	10
95-27941	VI10
95-27941	N10
95-27940	010
95-2794F	P10
95-27940	Q10
95-2794F	R10
95-27949	510
95-3026	R, G, O26
95-4025	29
95-4026	26
95-4027L	28
95-4029	28
95-4030	28
95-4034	16, 26

95-4035	26
95-4038	6
95-4040	16
95-4041	16
95-4042	26
95-4043	26
95-4044	26
95-4045	26
95-4046	26
95-4052	6
95-4054	16
95-KIT1A	3
95-KIT1B	3
95-KIT2A	3
95-KIT2B	3
95-KIT3	3
95-KIT4A	5
95-KIT4B	5
95-KIT6	4
95-KIT7	5
95-KIT8A	4
95-KIT8B	4



- Order Parts Online
- Maintenance & Troubleshooting
- Training Videos
- Help Finding a Technician



800.566.9953 | ASISupport.com | ASIDental.com

ADVANCED ENDODONTIC SYSTEMS® | ADVANCED DENTAL SYSTEMS®

