

PARTS INCLUDED

- Chair arm assembly (Qty 2)
- Chair arm post with pad (Qty 2)
- Mounting plate (Qty 2)
- Pan head screw, 10-32 x 5/8", (Qty 14)
- Flat head screw, 10-32 x 1/2", (Qty 2)

TOOLS REQUIRED

- Phillips screwdriver, #2

INSTRUCTIONS

1. Attach the mounting plates to the base of the chair, as shown, using six (6) 10-32 x 5/8" Pan Head Screws and two (2) 10-32 x 1/2" Flat Head Screws.

NOTE - Observe orientation of mounting plate with angle facing out.

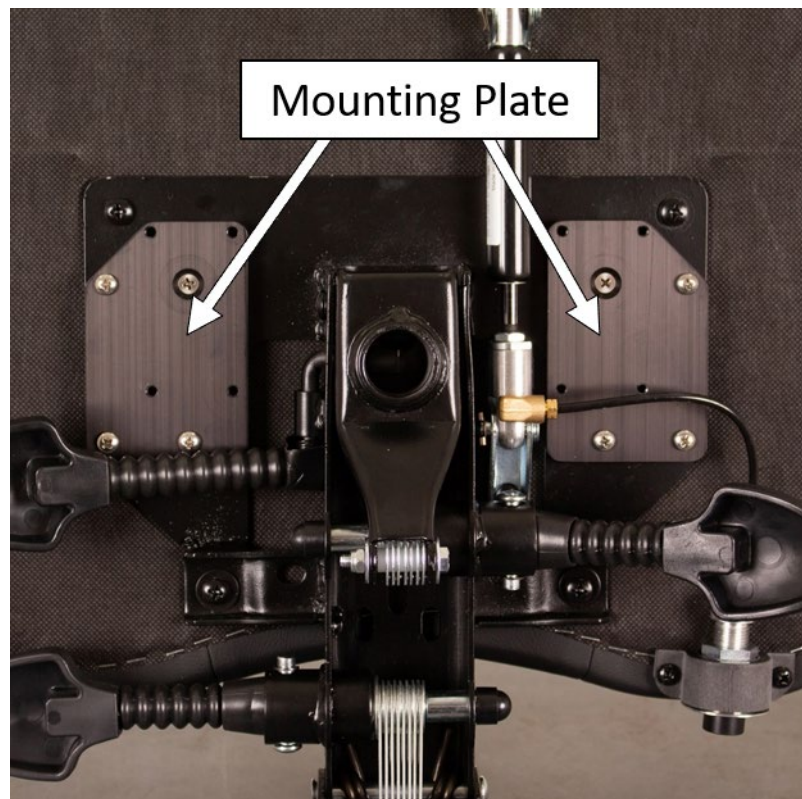


Fig. 1 – Attached Mounting Plates

2. Attach the arm assembly to the mounting plate using eight (8) 10-32 x 5/8" Pan Head Screws.



Fig. 2 – Attaching Chair Arm Assembly

3. Insert the chair arm post with pad into each arm assembly, tighten using knob.



Fig. 3 – Inserting Chair Arm Post with Pad